


OWNERS MANUAL

**Model No.
45-01002**

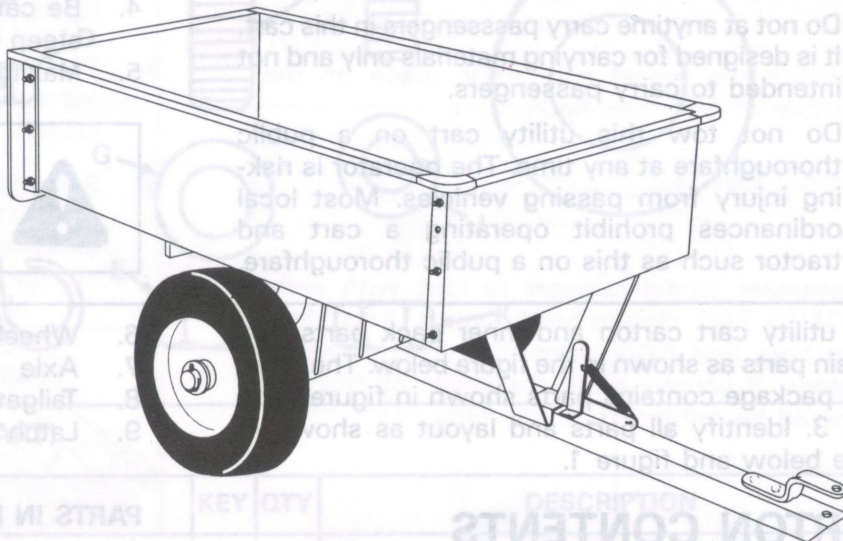

UTILITY CART

CAUTION:
Read Rules for
Safe Operation
and Instructions
Carefully

- Assembly
- Operation
- Maintenance
- Repair Parts

RULES FOR SAFE OPERATION

Preventing accidents is the responsibility of every equipment operator. The following general safety precautions must be fully understood and followed by every operator.

1. Do not at anytime carry passsengers in this cart. It is designed for carrying materials only and not intended to carry passengers.
2. Do not tow this utility cart on a public thoroughfare at any time. The operator is risking injury from passing vehicles. Most local ordinances prohibit operating a cart and tractor such as this on a public thoroughfare.

3. When towing cart do not drive too close to a creek or ditch and be alert for holes and other hazards. The above could cause you to lose control of the cart and tractor.
4. Be careful on any grade (hill) and stay off of steep grades. See slope guide on page 11.
5. Maximum towing speed - 10 M.P.H.



LOOK FOR THIS SYMBOL TO POINT OUT IMPORTANT SAFETY PRECAUTIONS. IT MEANS --- ATTENTION. BECOME ALERT, YOUR SAFETY IS INVOLVED.

Your utility cart carton and inner pack parts bag contain parts as shown in the figure below. The hardware package contains parts shown in figure 1 on page 3. Identify all parts and layout as shown in figure below and figure 1.

6. Wheels (2)
7. Axle
8. Tailgate Reinforcement Bracket
9. Latch Stand Bracket

CARTON CONTENTS


LOOSE PARTS IN CARTON

1. Cart Body (2)
2. Tailgate
3. Front Panel
4. Draw Bar Tongue
5. Wheel Support

PARTS IN INNER PACK BAG

10. Tailgate Guides (2)
11. Corner Caps (2)
12. Hitch Bracket
13. Latch Lock
14. Latch Mount Bracket (2)
15. Hardware Package (not shown)

CARTON CONTENTS

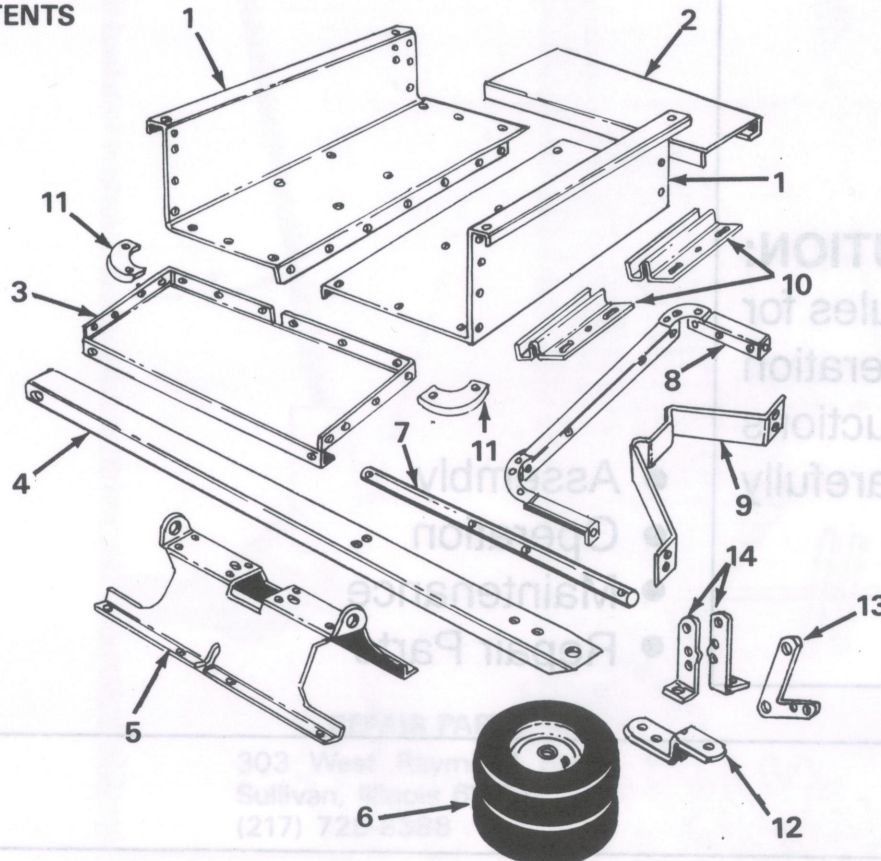

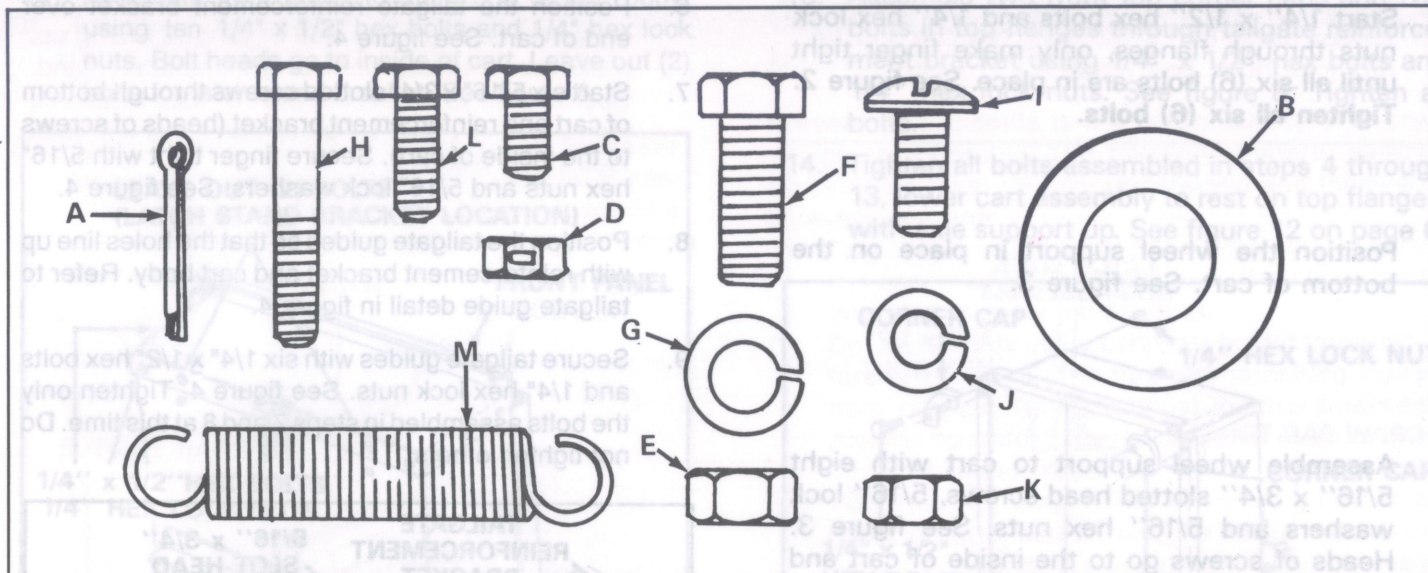


FIGURE 1 (FULL SIZE HARDWARE CHART)

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
A	2	Cotter Pin 1/8" x 1-1/4" Long	H	2	Hex Head Bolt 1/4-20 x 1-1/2" Long
B	4	Washer 1.59 OD x .78 ID	I	14	Slotted Truss Hd Bolt 5/16-18 x 3/4" Long
C	34	Hex Head Bolt 1/4-20 x 1/2" Long	J	14	Lock Washer 5/16"
D	37	Hex Lock Nut 1/4-20 Thread	K	14	Hex Nut 5/16-18 Thread
E	2	Hex Nut 3/8-16 Thread	L	1	Hex Head Bolt 1/4-20 x 3/4" Long
F	2	Hex Head Bolt 3/8-16 x 1" Long	M	1	Extension Spring
G	2	Lock Washer 3/8"			

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED FOR ASSEMBLY

- (1) Screwdriver
 - (1) Pliers
 - (2) 7/16" Open End or Box Wrenches
 - (2) 1/2" Open End or Box Wrenches
 - (2) 9/16" Open End or Box Wrenches
1. Remove the hardware pack and all loose parts from the carton. Be sure carton is empty before discarding.
 2. Position cart body halves upright on a smooth level surface, as shown in figure 2.



CAUTION

To help prevent tipping, assemble cart on a smooth level surface such as a garage floor or a paved driveway. Pay close attention to stability of cart body when it is in an upright position. **DO NOT LEAVE THE CART UNATTENDED IN UPRIGHT POSITION.** The cart could be knocked over causing personal injury.

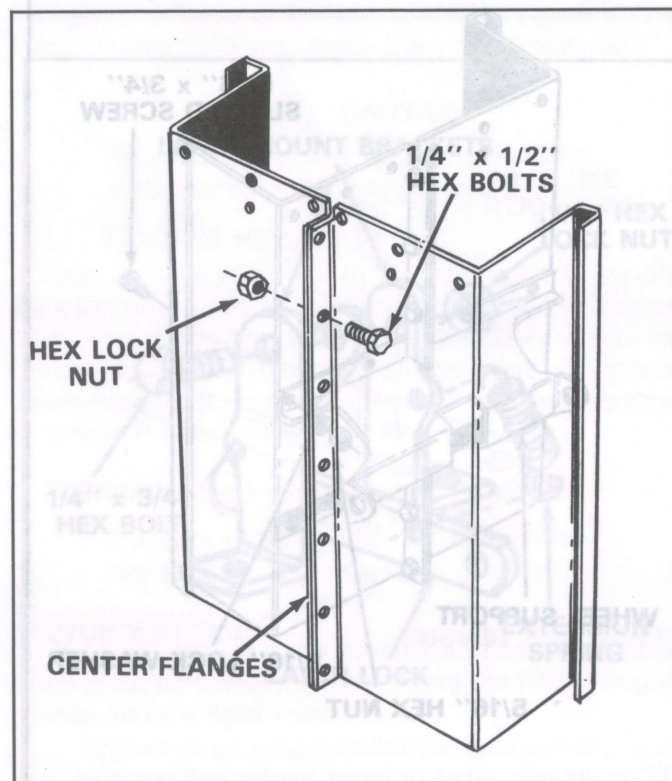


FIGURE 2

3. Start 1/4" x 1/2" hex bolts and 1/4" hex lock nuts through flanges, only make finger tight until all six (6) bolts are in place. See figure 2. **Tighten all six (6) bolts.**

4. Position the wheel support in place on the bottom of cart. See figure 3.

5. Assemble wheel support to cart with eight 5/16" x 3/4" slotted head screws, 5/16" lock washers and 5/16" hex nuts. See figure 3. Heads of screws go to the inside of cart and should be tightened at this time.

6. Position the tailgate reinforcement bracket over end of cart. See figure 4.
7. Start six 5/16" x 3/4" slotted screws through bottom of cart and reinforcement bracket (heads of screws to the inside of cart). Secure finger tight with 5/16" hex nuts and 5/16" lock washers. See figure 4.
8. Position the tailgate guides so that the holes line up with reinforcement bracket and cart body. Refer to tailgate guide detail in figure 4.
9. Secure tailgate guides with six 1/4" x 1/2" hex bolts and 1/4" hex lock nuts. See figure 4. Tighten only the bolts assembled in steps 7 and 8 at this time. Do not tighten others.

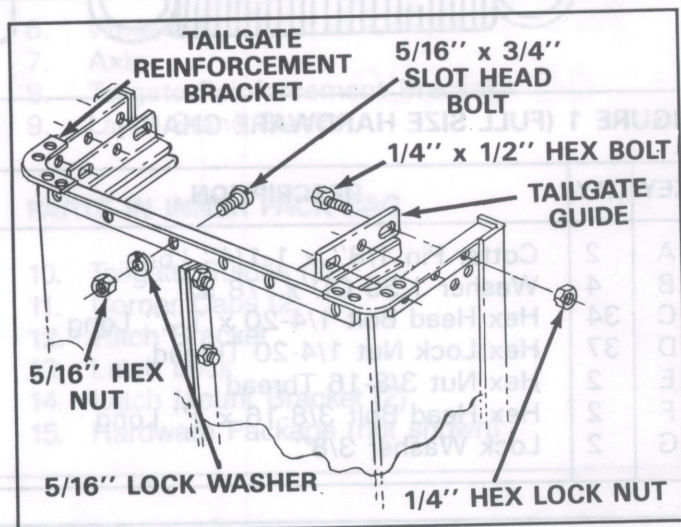


FIGURE 4

10. Reverse the cart position and stand up on tailgate reinforcement bracket and proceed with assembly steps 11 through 18. See figure 5.

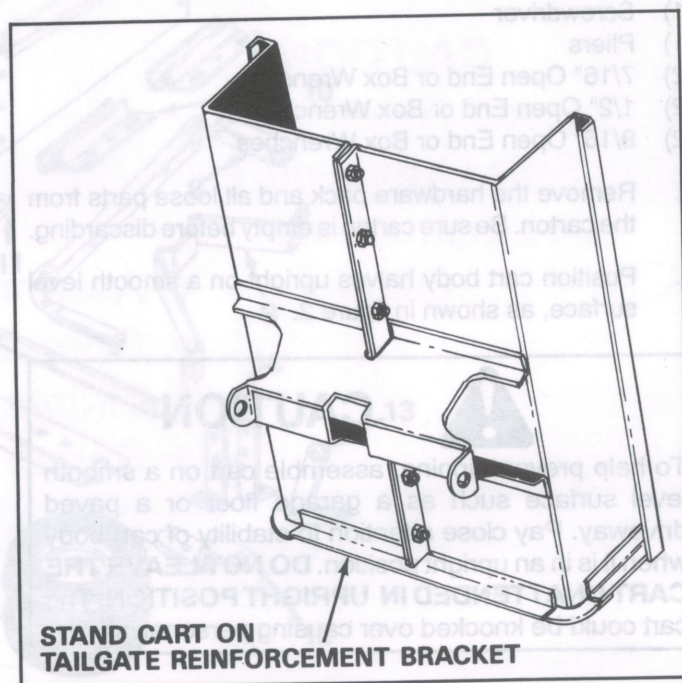


FIGURE 5

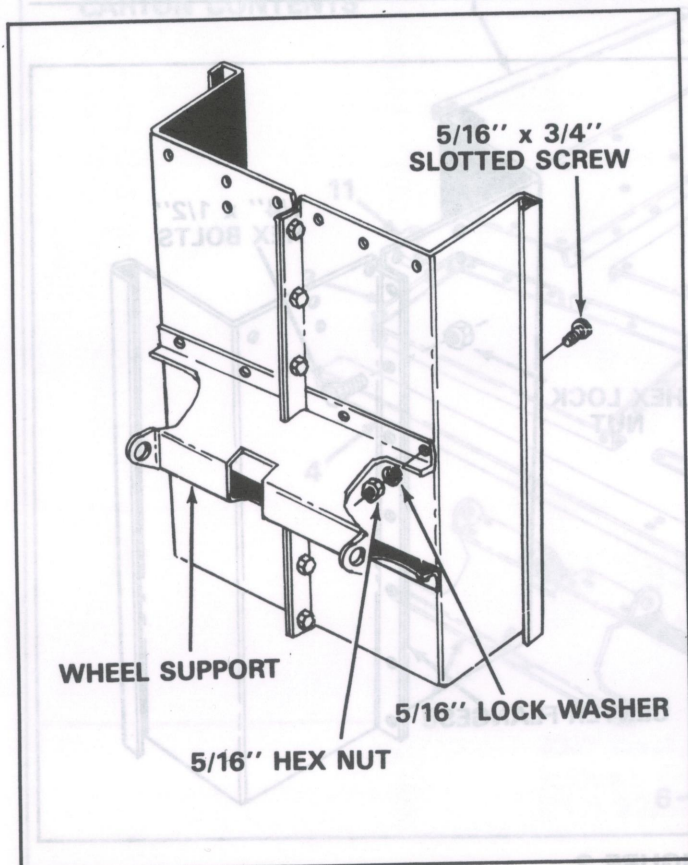


FIGURE 3

11. Assemble front panel to open end of cart body, using ten 1/4" x 1/2" hex bolts and 1/4" hex lock nuts. Bolt heads go to inside of cart. Leave out (2) bolts for latch stand bracket. See figure 6.

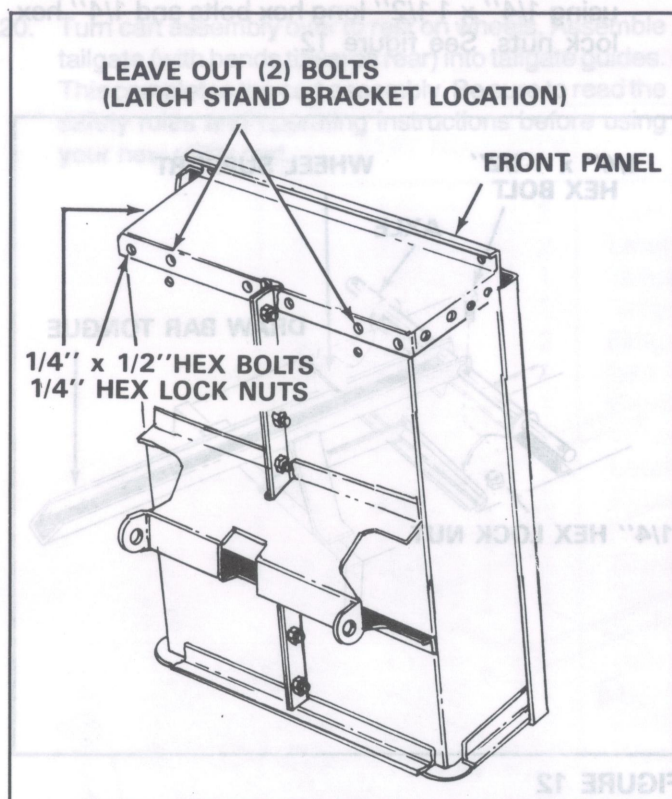


FIGURE 6

12. Assemble latch stand bracket using four 1/4" x 1/2" hex bolts and 1/4" hex lock nuts. See figure 7.

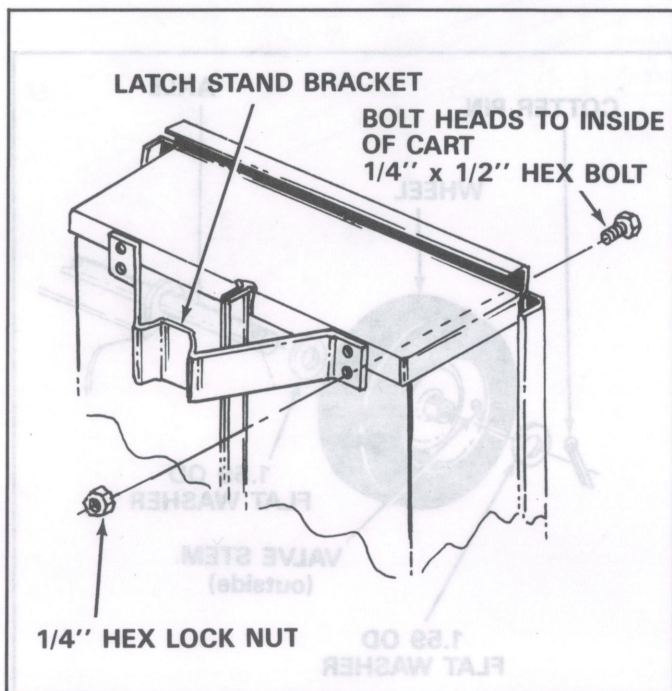


FIGURE 7

13. Assemble two front top corner caps and two bolts in top flanges through tailgate reinforcement bracket using 1/4" x 1/2" hex bolts and 1/4" hex lock nuts. See figure 8: Tighten all bolts.

14. Tighten all bolts assembled in steps 4 through 13, lower cart assembly to rest on top flanges, with axle support up. See figure 12 on page 6.

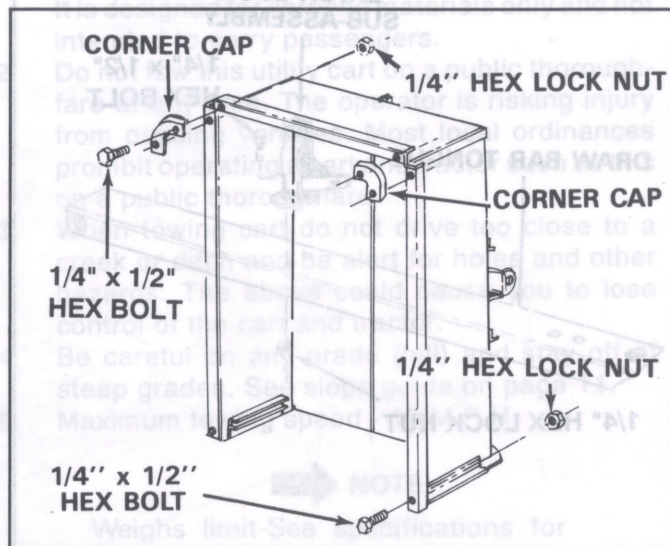


FIGURE 8

15. Assemble two latch mount brackets, latch lock and extension spring using one 1/4" x 3/4" hex bolt and 1/4" hex lock nut. See figure 9. **Do not tighten** 1/4" lock nut, latch lock must pivot freely.

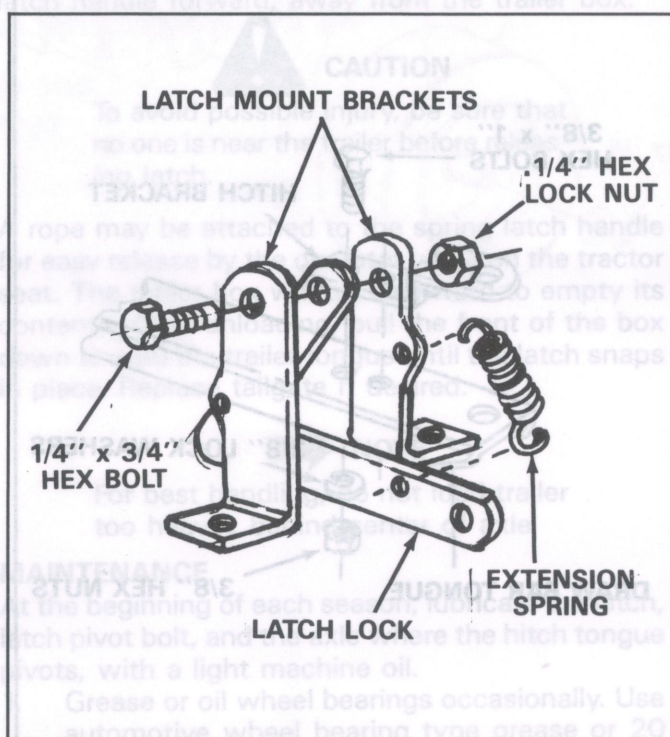


FIGURE 9

16. Assemble latch lock subassembly to drawbar tongue using 1/4" x 1/2" long hex bolt and 1/4" hex lock nuts. See figure 10.

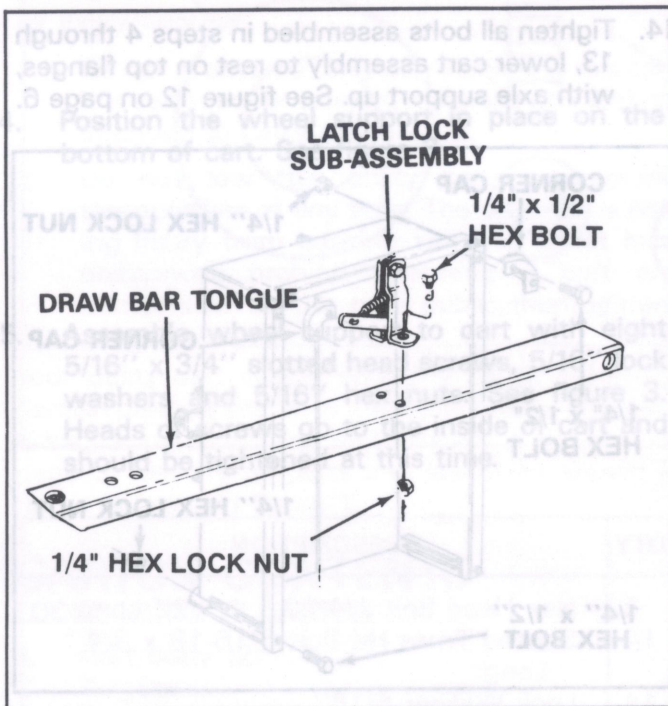


FIGURE 10

17. Assemble hitch bracket to drawbar tongue using 3/8" x 1" long hex bolts, 3/8" lock washers and 3/8" hex nuts. See figure 11.

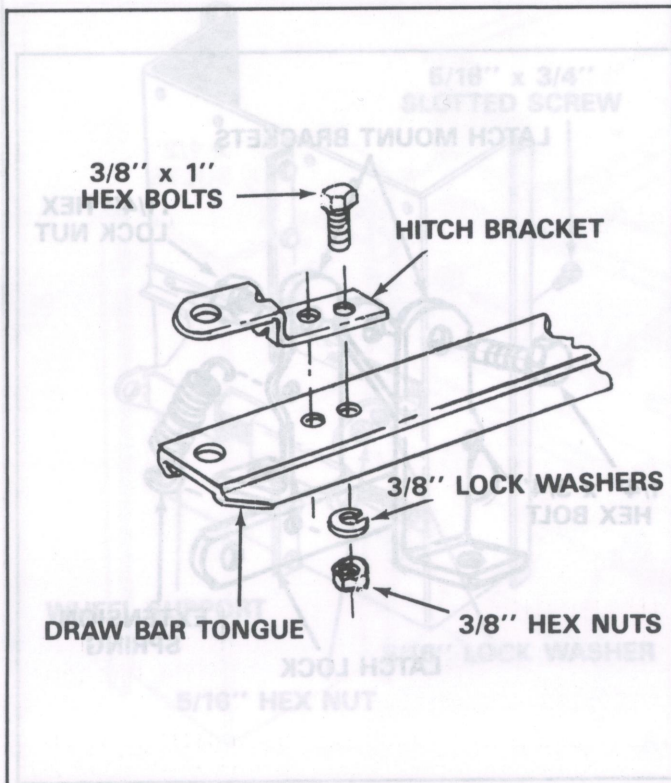


FIGURE 11

18. Assemble axle and draw bar tongue to wheel support keeping open side of tongue facing up, make sure that latch lock snaps over latch stand. Secure axle to wheel support or axle brackets, using 1/4" x 1-1/2" long hex bolts and 1/4" hex lock nuts. See figure 12.

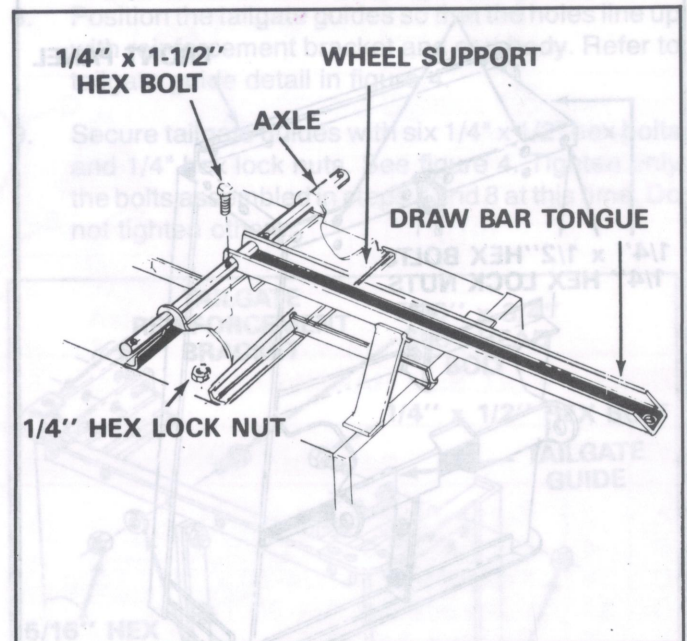


FIGURE 12

NOTE

Position valve stem to outside when installing wheels on axle. See figure 13.

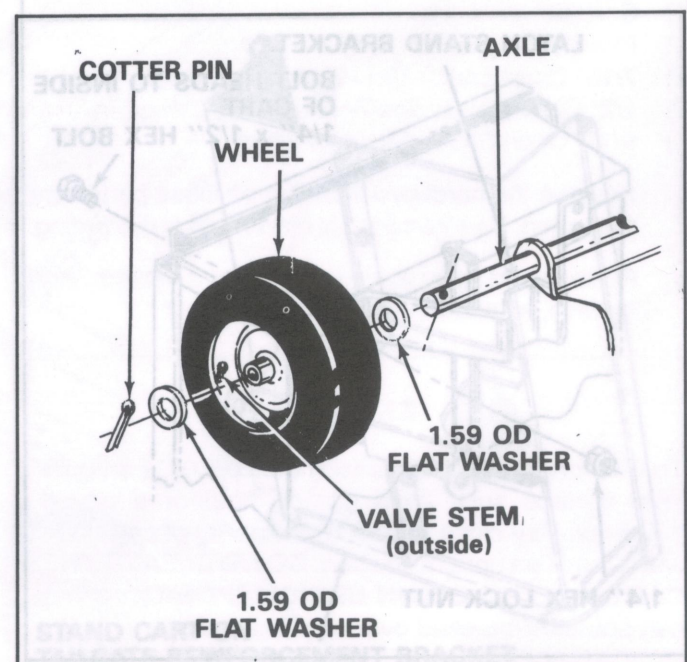


FIGURE 13

19. Assemble wheels as described in step 19, using flat washers and cotter pins. See figure 13.
20. Turn cart assembly over to rest on wheels. Assemble tailgate (with bends towards rear) into tailgate guides. This completes the cart assembly. Be sure to read the safety rules and operating instructions before using your new utility cart.

GENERAL SAFETY PRECAUTIONS

Preventing accidents is the responsibility of every equipment operator. The following general safety precautions must be fully understood and followed by every operator.

1. Do not at anytime carry passengers in this cart. It is designed for carrying materials only and not intended to carry passengers.
2. Do not tow this utility cart on a public thoroughfare at any time. The operator is risking injury from passing vehicles. Most local ordinances prohibit operating a cart and tractor such as this on a public thoroughfare.
3. When towing cart do not drive too close to a creek or ditch and be alert for holes and other hazards. The above could cause you to lose control of the cart and tractor.
4. Be careful on any grade (hill) and stay off of steep grades. See slope guide on page 11.
5. Maximum towing speed - 10 M.P.H.

NOTE

Weights limit-See specifications for each model. *One cubic foot of dirt weighs approximately 150 lbs.*
Do Not exceed cart weight capacity of 650 lbs.

OPERATION

To dump material from the trailer box, remove the tailgate by lifting it straight up and out from between the guides. Release the spring latch by pulling the latch handle forward, away from the trailer box.



CAUTION

To avoid possible injury, be sure that no one is near the trailer before releasing latch.

A rope may be attached to the spring latch handle for easy release by the operator while on the tractor seat. The trailer box will tilt backward to empty its contents. After unloading, pull the front of the box down toward the trailer tongue until the latch snaps in place. Replace tailgate if desired.

NOTE

For best handling, do not load trailer too heavily behind center of axle.

MAINTENANCE

At the beginning of each season, lubricate the latch, latch pivot bolt, and the axle where the hitch tongue pivots, with a light machine oil.

1. Grease or oil wheel bearings occasionally. Use automotive wheel bearing type grease or 20 weight oil.
2. Recommended tire pressure is 12-14 Lbs.

REPAIR PARTS FOR: UTILITY CART MODEL No. 45-01002

PRECAUTIONS

Preventing accidents is the responsibility of every equipment operator. The following general safety precautions must be fully understood and followed by every operator.

Do not at anytime carry passengers in this cart. It is designed for carrying materials only and not intended to carry passengers.

Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

Prohibit operation of a cart on a public thoroughfare. Do not tow this utility cart on a public thoroughfare at any time. The operator is taking injury from passing vehicles. Most local ordinances prohibit operation of a cart on a public thoroughfare.

MAINTENANCE

At the beginning of each season, lubricate the latch, latch pivot bolt, and the axle where the hitch tongue pivots, with a light machine oil.

Grease or oil wheel bearings occasionally. Use automotive wheel bearing type grease or 20 weight oil.

Recommended tire pressure is 12-14 lbs.

For best handling, do not load trailer too heavily behind center of axle.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.



NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

NOTE: Lock washers should be used on all bolts.

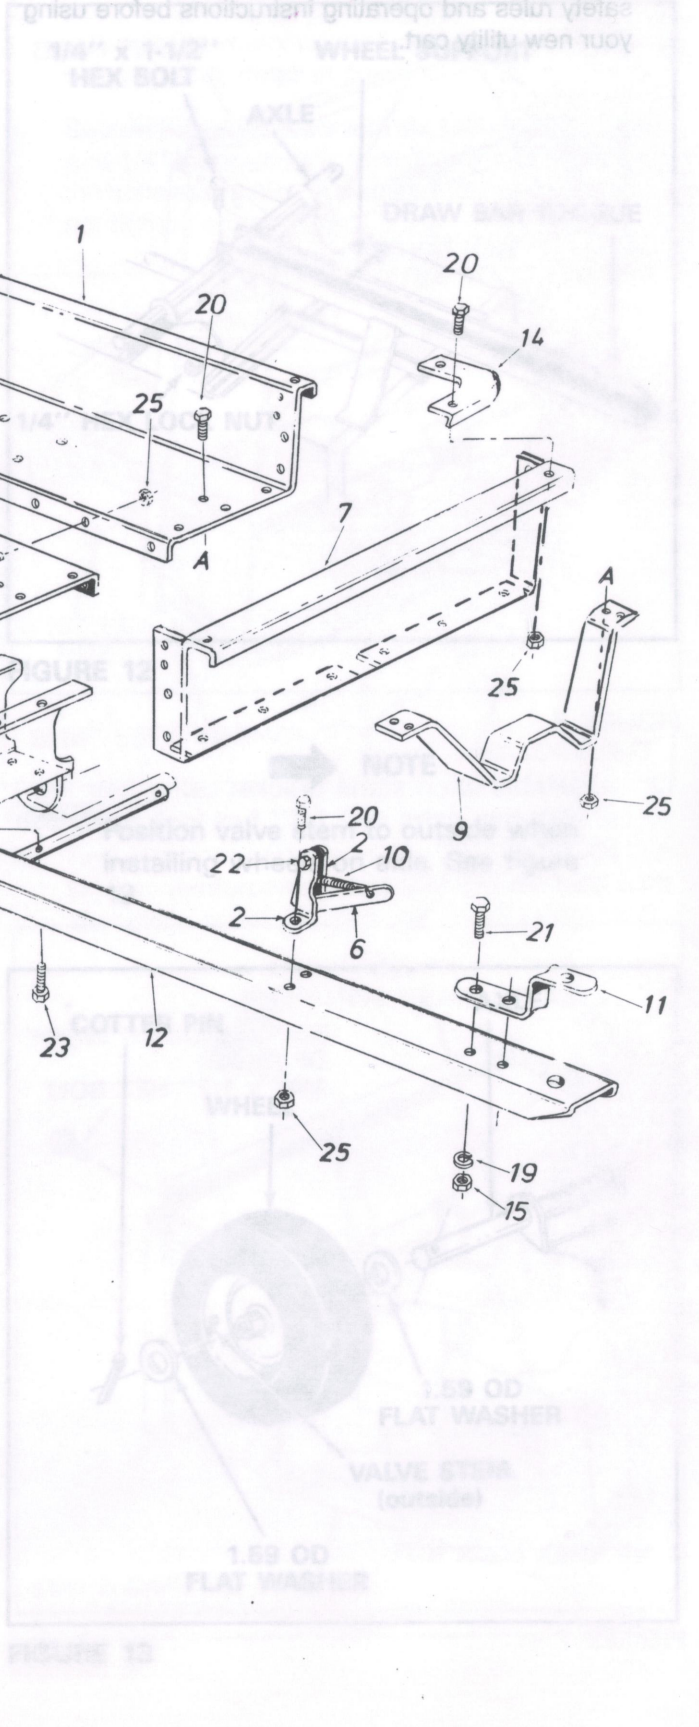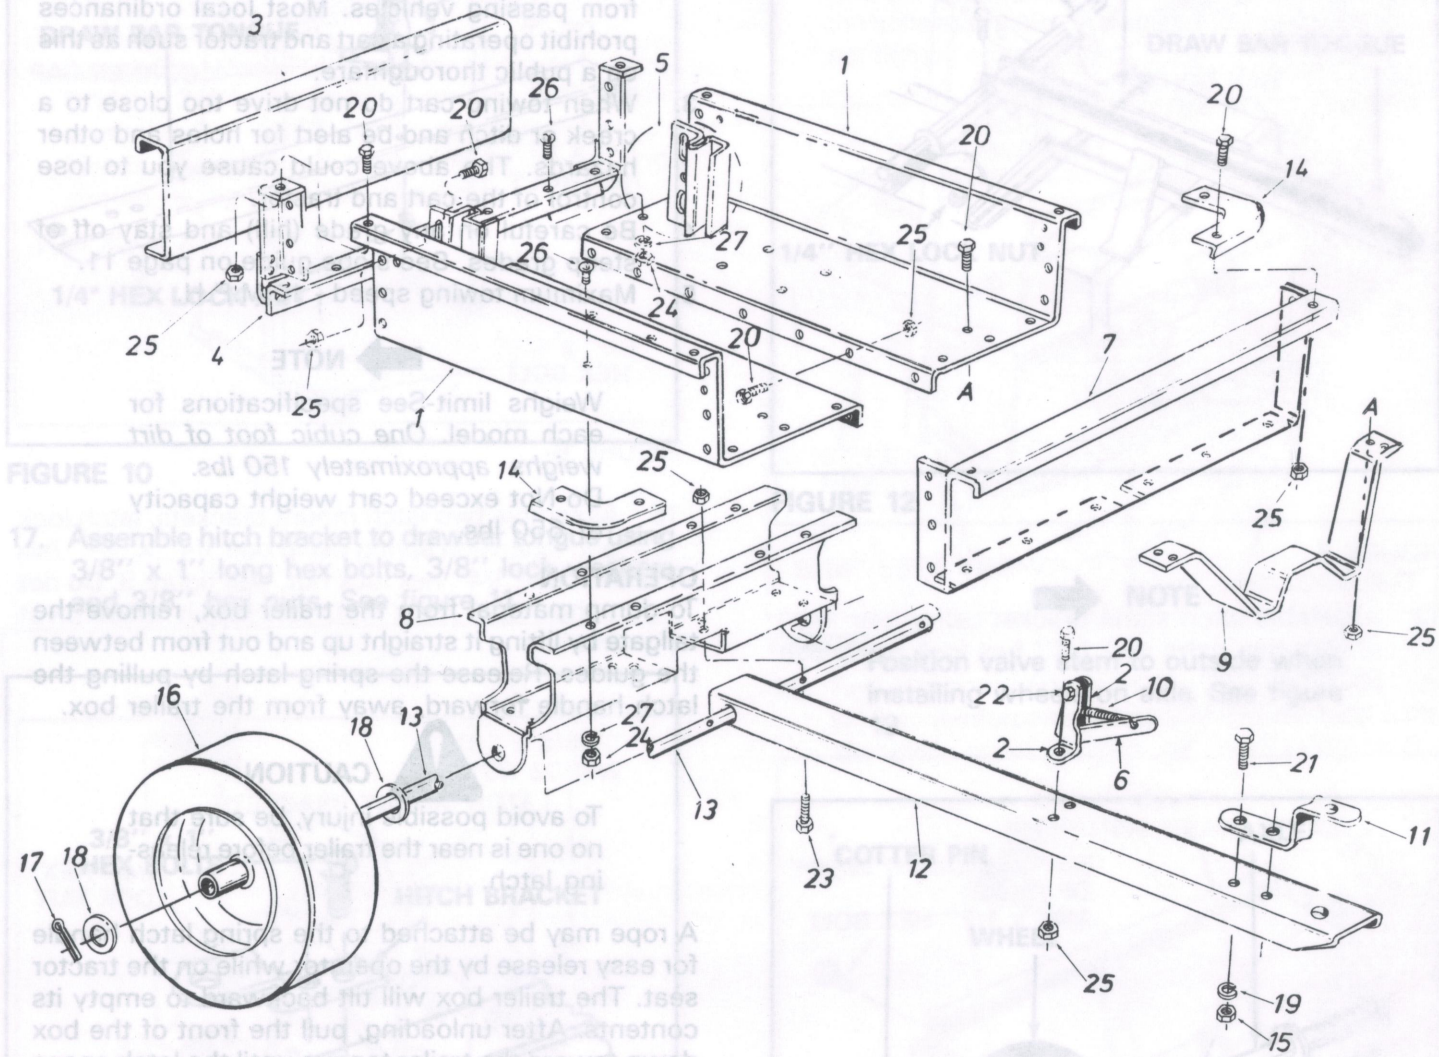

SLOPE GUIDE

(Keep this sheet in a safe place for future reference.)

Use this guide to determine if a slope is safe for the operation of your tractor and cart. Refer also to the instructions.

PARTS LIST FOR UTILITY CART MODEL 45-01002

REF. NO.	PART NO.	QTY.	DESCRIPTION
1	23912	2	Cart Body
2	23470	2	Latch Mount Bracket
3	23502	1	Tailgate
4	62458	1	Tailgate Reinforcement Bracket
5	23548	2	Tailgate Guide
6	62020	1	Latch Lock
7	23492	1	Front Panel
8	23506	1	Wheel Support
9	23297	1	Latch Stand Bracket
10	43000	1	Extension Spring
11	23014	1	Hitch Bracket
12	23913	1	Draw Bar Tongue
13	23026	1	Axle 3/4" Diameter
14	23484	2	Front Corner Cap
15	43015	2	Hex Nut 3/8-16 Thread
16	44456	2	Wheel, 4.30 x 3.75
17	43010	2	Cotter Pin, 1/8" x 1-1/4" Long
18	43009	4	Washer, 1.59 OD x .78 ID
19	43003	2	Lock Washer 3/8"
20	43175	34	Hex Head Bolt 1/4-20 x 1/2" Long
21	43001	2	Hex Head Bolt 3/8-16 x 1" Long
22	43012	1	Hex Head Bolt 1/4-20 x 3/4" Long
23	43648	2	Hex Head Bolt 1/4-20 x 1-1/2" Long
24	43083	14	Hex Nut 5/16-18 Thread
25	43013	37	Hex Lock Nut 1/4-20 Thread
26	43814	14	Slotted Truss Head Bolt 5/16-18 x 3/4" Long
27	43086	14	Lock Washer 5/16"
	46477	1	Owners Manual


CAUTION: DO NOT OPERATE YOUR TRACTOR AND CART ON A SLOPE IN EXCESS OF 10 DEGREES. BE SURE OF YOUR TRACTOR'S TOWING AND BRAKING CAPABILITIES BEFORE OPERATING ON A SLOPE. AVOID ANY SUDDEN TURNS OR MANEUVERS WHILE ON A SLOPE.



SLOPE GUIDE

(Keep this sheet in a safe place for future reference.)

Use this guide to determine if a slope is safe for the operation of your tractor and cart. Refer also to the instructions in your vehicle owners manual.

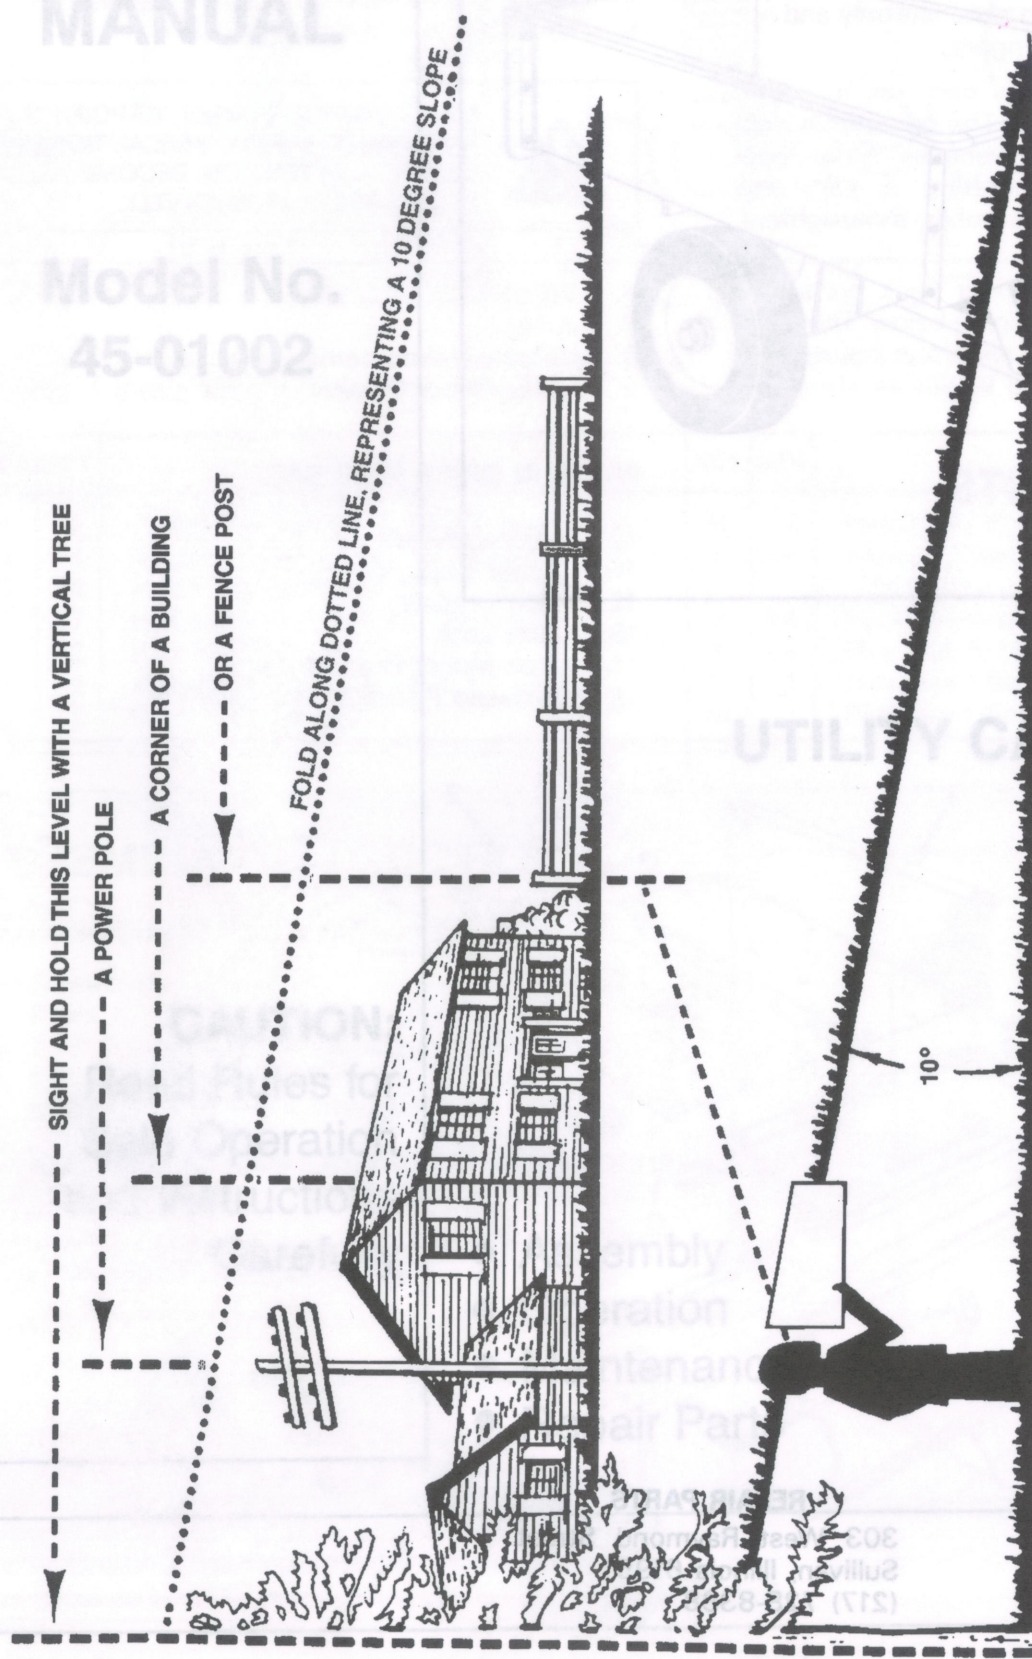

CAUTION: DO NOT OPERATE YOUR TRACTOR AND CART ON A SLOPE IN EXCESS OF 10 DEGREES. BE SURE OF YOUR TRACTOR'S TOWING AND BRAKING CAPABILITIES BEFORE OPERATING ON A SLOPE. AVOID ANY SUDDEN TURNS OR MANEUVERS WHILE ON A SLOPE.



303 West Raymond Street
Sullivan, Illinois 61951
(217) 728-8388